




Mancal Para Fusos de esferas



www.avasistema.com.br

Modelo **BK**


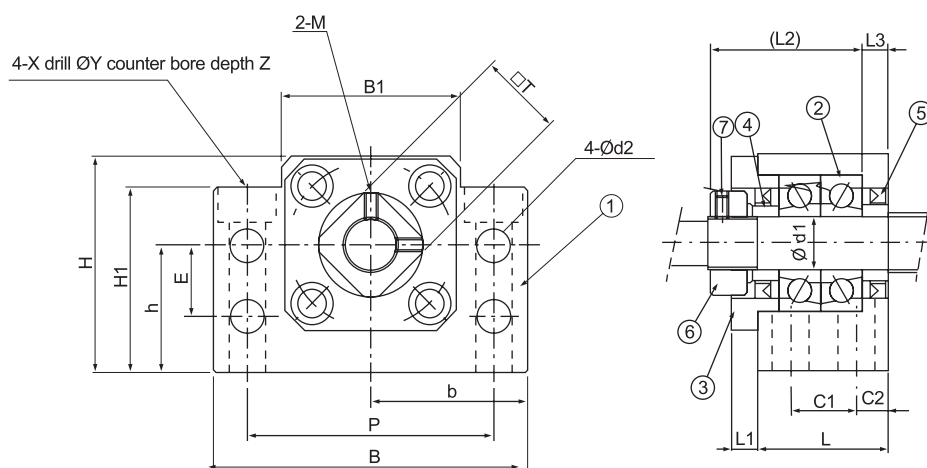


Unit: mm

Part No.	Main Dimensions																				
	Shaft diameter d1	L	L1	L2	L3	B	H	b	h	B1	H1	E	P	C1	C2	d2	X	Y	Z	M	T
								±0.02	±0.02												
BK-10	10	25	5	29	5	60	39	30	22	34	32.5	15	46	13	6	5.5	6.6	10.8	5	M3	16
BK-12	12	25	5	29	5	60	43	30	25	34	32.5	18	46	13	6	5.5	6.6	10.8	6.5	M4	19
BK-15	15	27	6	32	6	70	48	35	28	40	38	18	54	15	6	5.5	6.6	11	6.5	M4	22
BK-17	17	35	9	44	7	86	64	43	39	50	55	28	68	19	8	6.6	9	14	8.5	M4	24
BK-20	20	35	8	43	8	88	60	44	34	52	50	22	70	19	8	6.6	9	14	8.5	M4	30
BK-25	25	42	12	54	9	106	80	53	48	64	70	33	85	22	10	9	11	17	11	M5	35
BK-30	30	45	14	61	9	128	89	64	51	76	78	33	102	23	11	11	14	20	13	M6	40
BK-35	35	50	14	67	12	140	96	70	52	88	79	35	114	26	12	11	14	20	13	M8	50
BK-40	40	61	18	76	15	160	110	80	60	100	90	37	130	33	14	14	18	26	17.5	M8	50

① Housing ② Bearing ③ Holding lid ④ Collar ⑤ Seal ⑥ Lock nut ⑦ Hexagon socket-head Setscrew(with set piece)



Modelo **BF**

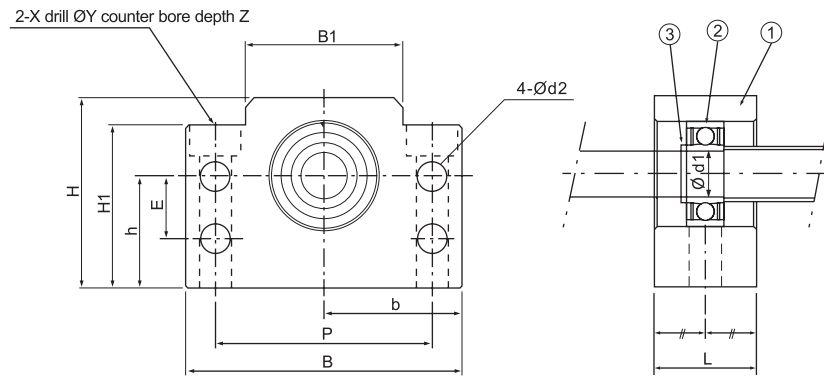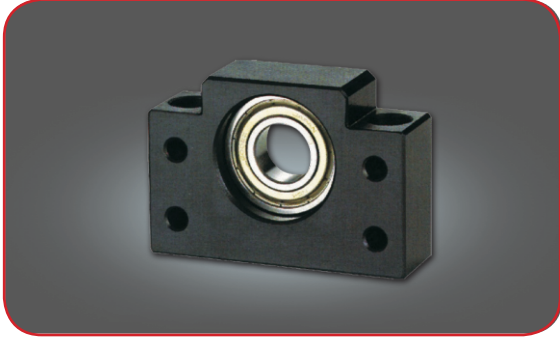

Part No.	Main Dimensions															
	Shaft diameter d1	L	B	H	b		B1	H1	E	P	d2	X	Y	Z	Bearing	Snap ring
					±0.02	±0.02										
BF-10	8	20	60	39	30	22	34	32.5	15	46	5.5	6.6	10.8	5	608ZZ	S 08
BF-12	10	20	60	43	30	25	34	32.5	18	46	5.5	6.6	10.8	6.5	6000ZZ	S 10
BF-15	15	20	70	48	35	28	40	38	18	54	5.5	6.6	11	6.5	6002ZZ	S 15
BF-17	17	23	86	64	43	39	50	55	28	68	6.6	9	14	8.5	6203ZZ	S 17
BF-20	20	26	88	60	44	34	52	50	22	70	6.6	9	14	8.5	6004ZZ	S 20
BF-25	25	30	106	80	53	48	64	70	33	85	9	11	17	11	6205ZZ	S 25
BF-30	30	32	128	89	64	51	76	78	33	102	11	14	20	13	6206ZZ	S 30
BF-35	35	32	140	96	70	52	88	79	35	114	11	14	20	13	6207ZZ	S 35
BF-40	40	37	160	110	80	60	100	90	37	130	14	18	26	17.5	6208ZZ	S 40

① Housing ② Bearing ③ Snap ring

Modelo FK

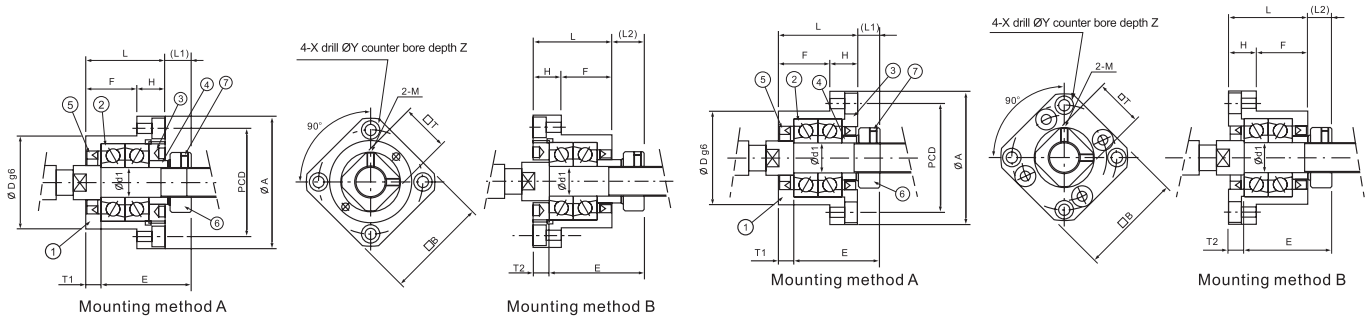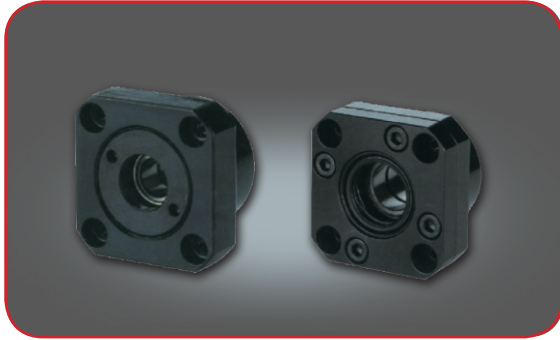

FK-6~FK-8


FK-10~FK-30

Unit: mm

Part No.	Main Dimensions																		
	Shaft diameter d1	L	H	F	E	Dg6		A	PCD	B	Mounting method A		Mounting method B		X	Y	Z	M	T
											L1	T1	L2	T2					
FK-6	6	20	7	13	22	22	-0.007 -0.02	36	28	28	5.5	3.5	8.5	4.5	3.4	6.5	4	M3	12
FK-8	8	23	9	14	26	28	-0.007 -0.02	43	35	35	7	4	10	5	3.4	6.5	4	M3	14
FK-10	10	27	10	17	29.5	34	-0.009 -0.025	52	42	42	7.5	5	8.5	6	4.5	8	4	M3	16
FK-12	12	27	10	17	29.5	36	-0.009 -0.025	54	44	44	7.5	5	8.5	6	4.5	8	4	M4	19
FK-15	15	32	15	17	36	40	-0.009 -0.025	63	50	52	10	6	12	8	5.5	9.5	6	M4	22
FK-17	17	45	22	23	47	50	-0.009 -0.025	77	62	61	11	9	14	12	6.6	11	10	M4	24
FK-20	20	52	22	30	50	57	-0.010 -0.029	85	70	68	8	10	12	14	6.6	11	10	M4	30
FK-25	25	57	27	30	60	63	-0.010 -0.029	98	80	79	13	10	20	17	9	15	13	M5	35
FK-30	30	62	30	32	61	75	-0.010 -0.029	117	95	93	11	12	17	18	11	17.5	15	M6	40

① Housing ② Bearing ③ Holding lid ④ Collar ⑤ Seal ⑥ Lock nut ⑦ Hexagon socket-head Setscrew(with set piece)

Modelo **FF**

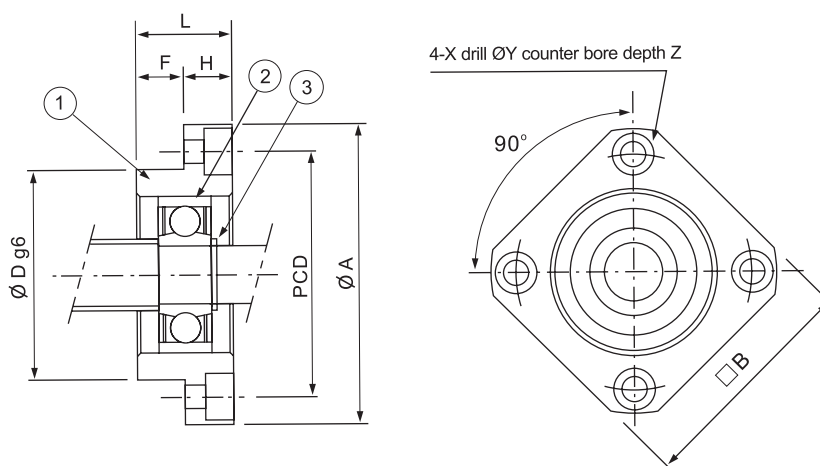

Unit: mm

Part No.	Main Dimensions													
	Shaft diameter d1	L	H	F	Dg6		A	PCD	B	X	Y	Z	Bearing	Snap ring
FF-6	6	10	6	4	22	-0.007 -0.02	36	28	28	3.4	6.5	4	606ZZ	S 06
FF-10	8	12	7	5	28	-0.007 -0.02	43	35	35	3.4	6.5	4	608ZZ	S 08
FF-12	10	15	7	8	34	-0.009 -0.025	52	42	42	4.5	8	4	6000ZZ	S 10
FF-15	15	17	9	8	40	-0.009 -0.025	63	50	52	5.5	9.5	5.5	6002ZZ	S 15
FF-17	17	20	11	9	50	-0.009 -0.025	77	62	61	6.6	11	6.5	6203ZZ	S 17
FF-20	20	20	11	9	57	-0.010 -0.029	85	70	68	6.6	11	6.5	6204ZZ	S 20
FF-25	25	24	14	10	63	-0.010 -0.029	98	80	79	9	14	8.5	6205ZZ	S 25
FF-30	30	27	18	9	75	-0.010 -0.029	117	95	93	11	17.5	11	6206ZZ	S 30

① Housing ② Bearing ③ Snap ring